


Video Measuring Camera User Manual

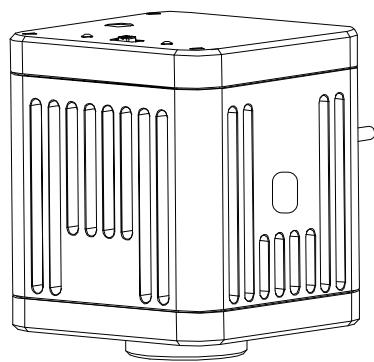

Content

Chapter 1 Notes And Safety Requirements	1 -
1.1 Cautions and notes	1 -
Chapter 2 Package List	2 -
Chapter 3 Hardware introduction	3 -
Chapter 4 Installation methods	4 -
4.1 Camera install to a trinocular microscope	4 -
4.2 Remove camera from microscope	4 -
4.3 Par-focal(only for dovetail models)	4 -
Chapter 5 Connection Methods	5 -
5.1 USB connection	5 -
5.2 HDMI connection	6 -
5.3 Local area network connection	6-7 -
Chapter 6 Troubleshooting And Frequently Asked Questions	8 -
6.1 USB Image acquisition problems	8 -
6.2 Interface problems	8 -
Chapter 7 Disclaimer	9 -

1.1 Cautions and notes

- (1) To avoid danger or damage incurred to the lens, do not touch the lens or sensor directly with your fingers.
- (2) To avoid failure or electric shock hazard and so on, do not disassemble or modify the internal structure of the device.
- (3) Do not plug in or unplug the USB port or the HDMI port when hands are wet.
- (4) Do not use alcohol and other organic solvents to clean.
- (5) If the lens or sensor is dirty or damp, you should better use dry and non-linen fabric or professional lens tissue to wipe them. To avoid scratches on the surface, do not touch the lens with your fingers. Wipe the lens or sensor lightly.
- (6) The products are not specifically designed for an outdoor use. Do not expose it to outdoor environment without any protection. Excessive temperature and humidity will damage the lens. Please avoid using the product under the following environment: high temperature or high humidity environment, places with direct sunlight, dirt or vibration and places near heat source.
- (7) Please use and store in the following environment:
 - Operating temperature : 0°C~ 40°C;
 - Storage temperature: -10°C~ 60°C;
 - Operating Humidity : 30~60%RH;
 - Storage Humidity: 10~80%RH.
- (8) If any foreign matter, water or liquid enter into the device by accident, disconnect the USB cable immediately. Please send it to the maintenance center and do not use the hair dryer to dry it by yourself.
- (9) To prevent microscope from being tripped over or dropped, please put away the device's USB cables in use or standby.
- (10) To avoid electric shock by accident, please power off microscope before you move your Windows PC or laptop.
- (11) The cleanliness of the device lens will directly affect clarity degree of contents from the computer screen during preview. Problems like various circles or spots on the screen may mostly be incurred by dirt on the lens. When cleaning, please use professional lens tissue or other professional detergent to clear the dirt on the lens.
- (12) Registered trademark: any organization or individual shall not copy, print or translate any part of this article into another language.

Chapter 2 Package List

1.WiFi camera(C-mount or With 0.43X tube lens)



2.USB mouse



3.HDMI cable(2m)



4.Allen key(only for With 0.43X tube lens)



5.One paper with QR code and link to download software

Software、Manual Download
软件、说明书下载



Windows download link:
PC软件下载链接:
<https://ostec.com.cn/downloads/>



For 5.0/8.0MP
For 12.0MP

KoPa WiFi Lab For Android/IOS Download
KoPa WiFi Lab 安卓/IOS 软件下载




Software Manual Download

6.Adapter(Available in European, American, British)



Chapter 3 Hardware Introduction

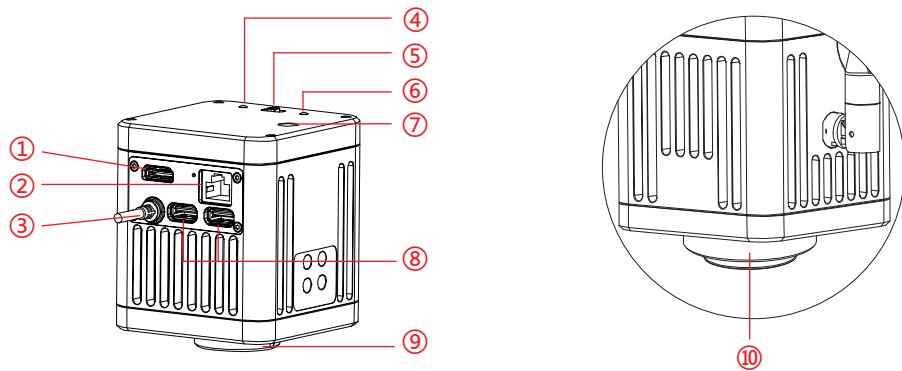

①	HDMI output interface	Through HDMI cable, connect with external monitor with HDMI interface to realize video, signal transmission, etc.
②	Network interface	Turn to WiFi: It can be connected to the router and access to the local area network, so that Windows PC, smartphones and tablets in the local area network can share the microscopic screen; it can also be directly connected to the Internet.
③	USB output / power supply	Turn to USB: connects to Windows PC for data transfer, and the Windows PC side can image acquisition through software. Turn to WiFi: connects to adapter to enable powering the camera, and wireless devices can connect to the camera WiFi to image acquisition.
④	PWR (Power indicator)	Turn to OFF, the indicator light is red. Turn to USB or WiFi, the indicator light is blue.
⑤	USB / OFF / WiFi working mode switching	USB: when the USB cable connected to the computer, it can image acquisition through the computer software. OFF: turn off the power, the camera stops working on this time. WiFi: the wireless devices connect to the camera WiFi to image acquisition.
⑥	ACT indicator:	Turn to WiFi, the indicator light is blue. Turn to other gears, the indicator light does not light up.
⑦	Easy focus hole (only for dovetail mount model)	Internal filament focus structure is used to adjust the 0.43X field lens of the camera to achieve par-focal with electronic imaging and observation under eyepiece.
⑧	USB interface	Connect with trinocular microscope which has C-mount.
⑨	Standard C -mount	Connect with the dovetail slot on the trinocular microscope.
⑩	With 0.43X tube lens	A 0.43X field lens for adjusting the camera, enabling co-focal imaging between the microscope and electronic imaging.

4.1 Camera install to a trinocular microscope

- (1) Remove the dust cover of microscope dovetail slot or standard C -mount, as shown in Figure 1.
- (2) Snap the camera onto the dovetail slot or screw it onto the standard C -mount of the microscope, oriented as in Figure 2; tighten the fastening screws on the dovetail slot of the microscope, fix the camera on the microscope.

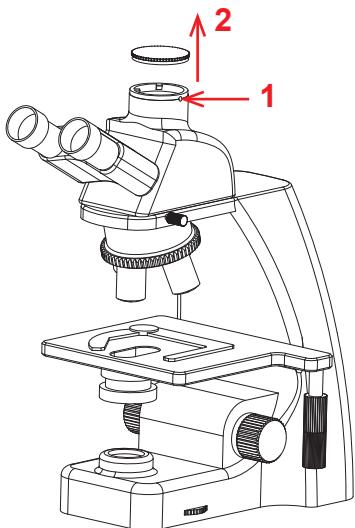


Figure 1

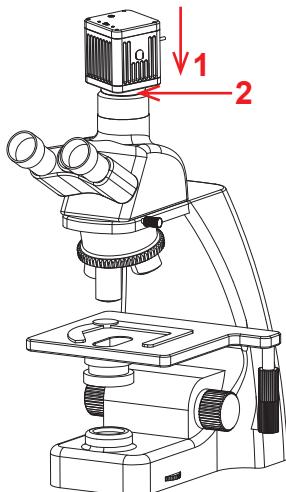



Figure 2

4.2 Remove camera from microscope

Reverse the order with the installation.

4.3 Par-focal(only for dovetail models)

- (1)Place a specimen under microscope, adjust diopter of the eyepiece to the minimum value, and use the 10X objective lens, recommend to focus on any black spot / or the darkest spot on the specimen, until the visualization is the clearest;
- (2)Adjust the easy focus hole in clockwise or counterclockwise direction with the Allen key until the image from software is clear to achieve par-focal;
- (3) Once par-focal under 10X objective is completed, the other objectives are basically free of adjustment and achieve par-focal as well.

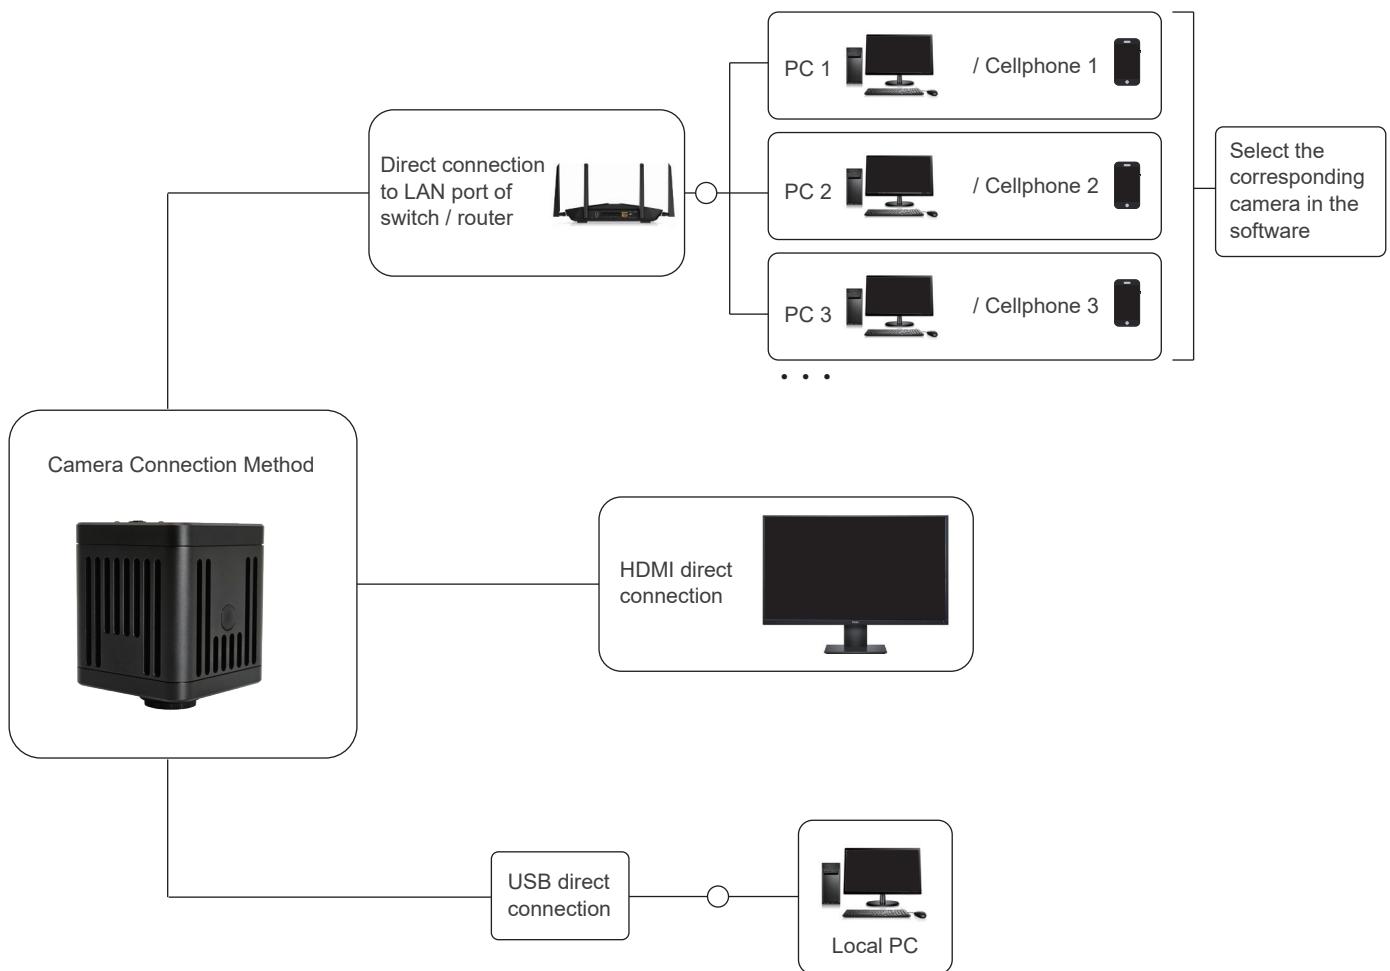

5.1 USB connection

Steps:

- (1) Camera USB cable connect to the USB port of a Windows PC;
- (2) Toggle switch to USB gear;
- (3) Install and run KoPa Capture Pro software.

Windows PC software KoPa Capture Pro download link: <https://cn.ostec.com.cn/downloads/>;

Please refer to the "KoPa Capture Pro Software User Manual" for details.

Windows System Requirements

Microsoft Windows 10 (64 bit) or later version operating systems.

CPU: i5 10th generation or later version.

Hard drive: 512GB or more.

Memory: 16GB or more.

Graphics card: Core graphics.

Network card: 10/100/1000M adaptive.

5.2 HDMI connection

- (1) Connect the camera's USB cable to the adapter and the HDMI cable to the display;
- (2) Set the switch to the USB position; the built-in software is Prime View;
- (3) For specific software operation instructions, please refer to the Prime View Software User Manual.

5.3 Local area network connection

The network port defaults to LAN functionality (with the port LED indicator showing green), enabling connection to a computer.

Pressing the reset pin for 1 to 3 seconds will switch it to WAN functionality, allowing connection to the local area network. At this point, the LED indicator will change from green to yellow.

Once the camera connected to a local area network, it can be changed to a network camera. Up to 13 desktop computers, cell phones, tablets and laptops on the same local area network can realize synchronized real-time preview.

5.3.1 The method for connect the camera to a local area network

- (1) Switching to WiFi gear when the camera is powered on;
- (2) Plug one end of the network cable into the WAN port of the camera and the other end into the LAN port of the local area network router.

Notes:

- 1) The local area network must support 5G WiFi IEEE802.11ac protocol, otherwise it cannot be displayed in the list.
- 2) If the local area network opens the Internet function, the camera can also access the Internet.

5.3.2 Retrieve images via the local area network from a Windows PC on the same local area network

- (1) Connect a Windows PC or laptop that supports 5G WiFi IEEE802.11ac protocol to the same local area network as the camera.
- (2) Install and run the software KoPa Capture Pro on the Windows PC or laptop.
- (3) When there is only one network camera in the local area network, the software can automatically get the live image from the camera.
- (4) When there are multiple network cameras in the same local area network, click the icon "  " in the upper right corner of KoPa Capture Pro (Figure 1), the list automatically shows all cameras in the current local area network (Figure 2), select a camera as needed, support switching midway at any time.

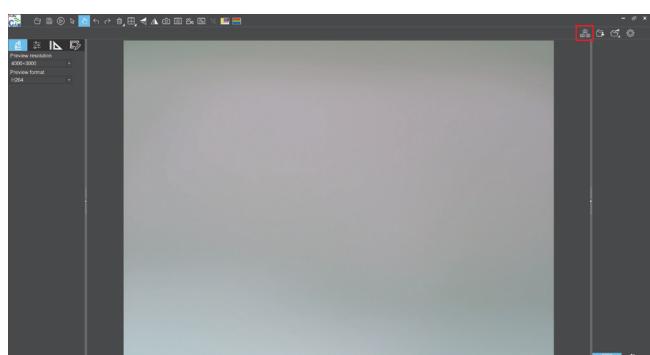


Figure 1

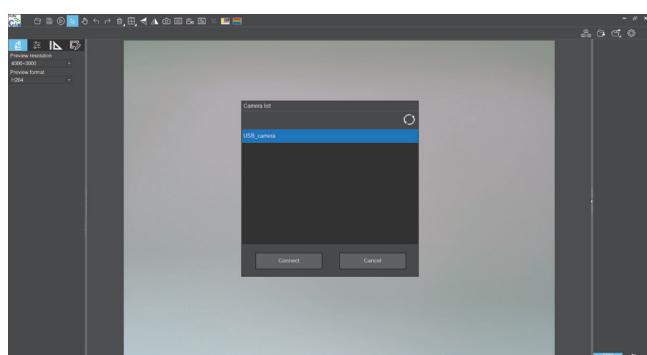


Figure 2

Notes:

When a Windows PC or laptop computer accesses the camera microscope images, it does not affect the computer's ability to access the Internet, and if that local area network is open to the Internet, the Windows PC or laptop can also access the Internet.

5.3.3 Retrieve images via the local area network from cell phones and tablets in the same local area network

- (1) Connect the cell phones or tablets that supports 5G WiFi IEEE802.11ac protocol to the same local area network as the camera.
- (2) Install and run the App KoPa WiFi Lab on the cell phones or tablets, enter the navigation interface and click the " ▶ " button.
- (3) When there is only one network camera in the local area network, the App can automatically get the live image from the camera.
- (4) When there are multiple network cameras in the same local area network, click the icon "  " in the navigation interface (Figure 1), pop-up menu (Figure 2). The list automatically shows all cameras in the current local area network (Figure 3), select a camera as needed, support switching midway at any time.

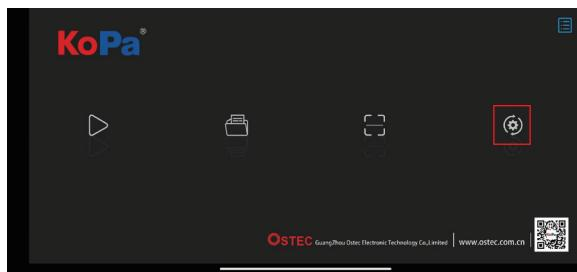


Figure 1

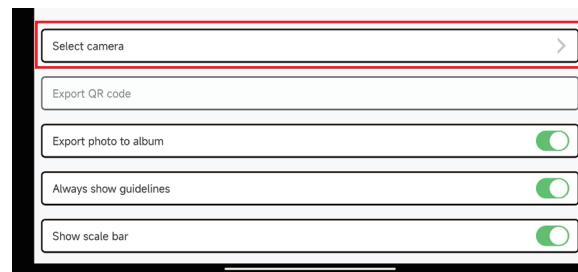


Figure 2

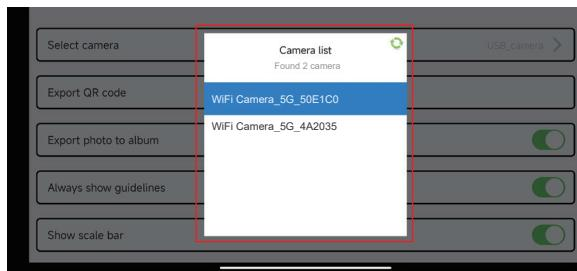


Figure 3

6.1 USB image acquisition problems

6.1.1 Image acquisition failure

- (1) Ensure that the microscope has turned on the light and the image is visible to the eyepiece;
- (2) Ensure that the USB port of the computer is working properly;
- (3) Ensure the computer can recognize the camera (you can find the "USB Camera" in the "Device Manager" of the computer), if the camera is still not recognized after re-plugging the USB cable, please contact our customer service;
- (4) If the computer can recognize the camera, but can not image acquisition, please reinstall the software "KoPa Capture Pro", please close the antivirus software in your computer when reinstalling the software to prevent the installation from being intercepted by antivirus software;
- (5) If the fault cannot be eliminated after restarting the camera, please contact our customer service.

6.2 Interface problems

6.2.1 External HDMI monitor does not display / display exceptions

- (1) Ensure the HDMI cable can be used normally;
- (2) Ensure the HDMI monitor can be used normally;
- (3) Ensure that the external HDMI monitor can support 3840x2160 @30Hz/1920x1080 @60Hz/1920x1080 @30Hz/1280x720 @60Hz;
- (4) If fault cannot be eliminated, please contact our customer service.

Chapter 8 Disclaimer

(1) In order to protect the legitimate rights and interests of users, please carefully read the instructions, disclaimers and safety instructions provided with this product before using it. The company reserves the right to update the above documents. Please operate the product according to the instructions and safety instructions.

(2) Once you begin to use the product, you shall be deemed to have read, understood, recognized and accepted all terms and contents of the product's instructions, disclaimers and safety instructions. Users undertake to be responsible for their actions and all consequences. User undertakes to use the product only for legitimate purposes and agrees to these terms and any relevant policies or guidelines that the company may establish.

(3) In the process of using this product, please strictly abide by and execute the requirements including but not limited to the instructions and safety instructions. All personal injuries, accidents, property losses, legal disputes and other adverse events that cause conflicts of interest caused by violation of the safety instructions or irresistible factors shall be borne by users themselves, and the company shall not assume any responsibility.

(4) Safety instructions:

- 1) Please do not use wet hands to plug and unplug the power supply of the equipment.
- 2) Please be sure to use a regular brand power socket, and make sure the grounding is well grounded to prevent electric shock.
- 3) Please be sure to make regular safety checks on sockets and plugs to avoid potential electrical safety hazards caused by aging and short circuit.
- 4) Please be sure not to use the product in a humid or hot environment to ensure the safety of the product.
- 5) Please be sure to loosen bundle cords of the power cable before using, to avoid electromagnetic induction and heating, thus increasing the heat dissipation speed.
- 6) Please be sure not to use the product equipment or socket or other places in high or easy to fall, so as to avoid damage.
- 7) Before opening the socket power supply, please be sure to turn off the load power switch of the product equipment.
- 8) The company reserves the rights to improve product, upgrade technology and change parameters without prior notice.